


Notification of change: PC Software Update V5.3.3 to V5.3.4

Date: August 7, 2023

New modes of the **FREEZE MVAL** parameter for L-LAS-LT-...-SL sensors.

For the L-LAS-LT-...-SL sensors, the modes **OFF** and **ON** were available for the parameter **FREEZE MVAL**.

With version V5.3.4, the following modes are now available, as with the AL, CL, ... sensors: **SET_MIN**, **SET_MAX**, **FREEZE_MV**.

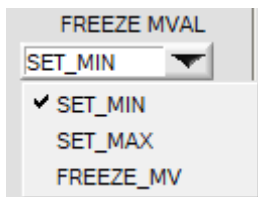

SET_MIN: When leaving the measuring range downwards or upwards, 0V is output.

SET_MAX: When leaving the measuring range downwards or upwards, 10V is output.

FREEZE_MV: When leaving the measuring range downwards, 0V is output and when leaving the measuring range upwards, 10V is output. If the measuring range is left abruptly (fast exit), the last plausible value is output.