


Notification of Change: L-LAS-TB-Scope V5.4.2 to V5.4.3

This document summarises the changes that were made with the software update from **L-LAS-TB-Scope V5.4.2 to V5.4.3**.

New in V5.4.3:

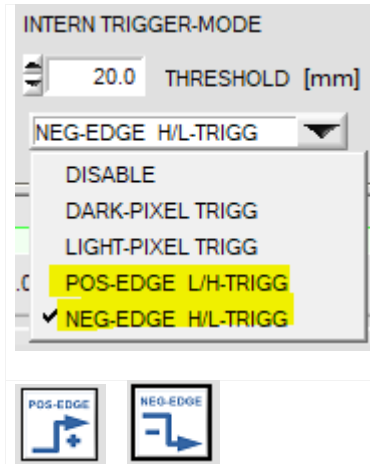

INTERN TRIGGER-MODE

Two additional internal auto-trigger modes:
POS-EDGE L/H-TRIGG
NEG-EDGE H/L-TRIGG

Additional button to activate/deactivate Auto-Trigger function in graphical VIDEO output window.

Depending on the mode set in INTERN-TRIGGER-MODE the POSITIVE-EDGE or NEGATIVE-EDGE button appears. If this button is active, the L-LAS-TB-Scope Application is WAITING FOR TRIGGER event.

