

SPECTRO3-ANA-Scope: Changes due to software update from SPECTRO3-ANA-Scope V1.2 to V1.3

The text below summarises the changes that were made with the software update from **SPECTRO3 ANA V1.2 to V1.3**.

A software update from V1.x to V1.3 can be performed quite easily.


All you need is the FirmwareLoader V1.1 and the firmware files for version 1.3.

The FirmwareLoader V1.1 can be found on the CD that is provided with the sensor or can be downloaded from our homepage.

The firmware files are available from your sensor supplier.

The respective procedure is exactly described in the "[Manual FirmwareLoader V1_1](#)" file (see software CD/DVD: Folder Support Software → Version Update → FirmwareLoader V1.1).

Change 1:

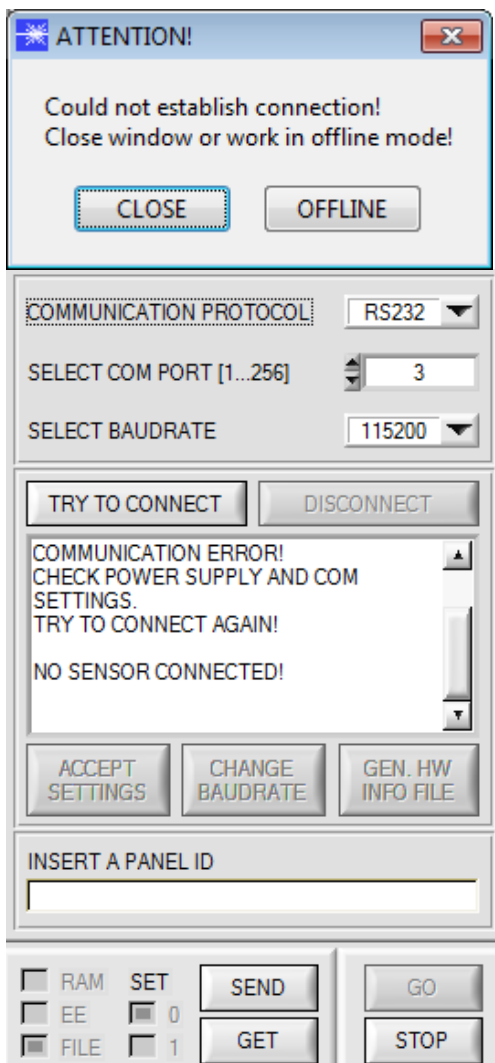


If a connection is not established automatically, e.g. if no sensor is connected, the software can be run in OFFLINE mode. In offline mode it is only possible to exchange parameters with a file on a storage medium, which often is helpful for the purpose of analysing parameter files.

If a sensor is connected and a connection still cannot be established, either the SCOPE version (program on the PC) and the firmware version (program in the sensor) do not match, or the interface to the sensor must be correctly configured.

If different Scope and firmware versions should be the problem, please get the Scope version that matches the firmware from your supplier.

Change 2:

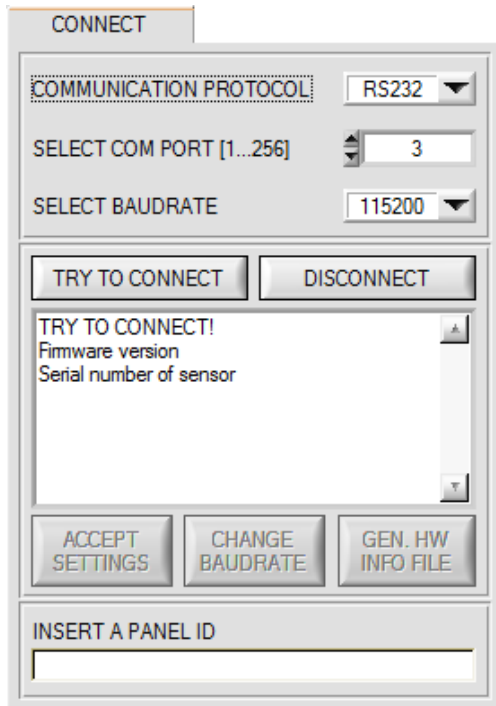

1. When a connection is established the serial number of the contacted sensor is transferred in addition to the firmware version.
2. The baudrates have been extended with 230400 and 460800.
3. **DISCONNECT** disconnects the connection between sensor and PC. The software then switches to OFFLINE mode, where it is only possible to exchange parameters with a file on a storage medium. The interface is then free for other programs (e.g. FirmwareLoader).

Change 3:

The format for the firmware and for the Scope version number has been changed.

The full version number now is a 3-character combination (a.b.c). Firmware and software can be run in combination if the first two characters (a.b) match. The third character c has been introduced to identify the remedying of possible software bugs.


It is thus easy for the user to make sure he always uses the most recent version.

The full Scope version number is displayed after approx. 2 seconds when you move the mouse pointer on the Scope version.

SPECTRO3 ANA Scope V1.3

SPECTRO3 ANA Scope V1.3.0

The full firmware version number is displayed after approx. 2 seconds when you move the mouse pointer on the status line.

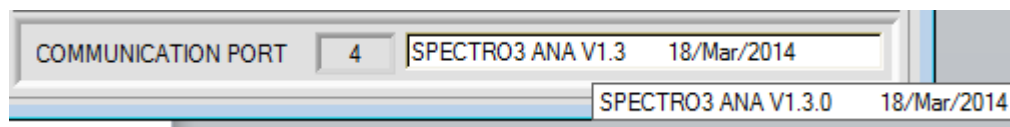

Change 4:

The screenshot shows the 'CALIB' tab interface. At the top, there are two status indicators: 'RED' with the value '3383' and 'GREEN' with the value '3064'. Below these are input fields for 'MAX DELTA OF RATE' (set to 500) and 'SETVALUE FOR R,G, B' (set to 3000). A 'CALC CALIB FACTORS' button is present. Further down are three spinners for 'CF_RED', 'CF_GREEN', and 'CF_BLUE', all set to 1024. There are 'SEND CF' and 'GET CF' buttons. At the bottom is a 'START SELF CALIBRATION' button. A callout box points to the 'RED' and 'GREEN' values with the text: 'e.g. here: Double-click with the right mouse button.' To the right of the interface is a vertical bar with three colored segments: red, green, and blue.

Accessing offset calibration now requires a double-click with the right mouse button exactly on the frame in the **CALIB** tab.

It is no longer sufficient to just click between e.g. RED and GREEN.

The screenshot shows a 'PASSWORD PANEL' dialog box. It has a title bar with a close button. Inside, there is a label 'ENTER PASSWORD' and a text input field containing a masked password '*****'.

You will then be prompted for a password.
The password is: mellon

Make sure that the Receiver of the sensor is covered!
Push CALCULATE OFFSET to detect the offset.
Push SEND OFFSET to update the sensor.

The screenshot shows an 'OFFSET' calibration dialog box. It contains three input fields: 'OFFSET R [Default 3100]' with the value '3081', 'OFFSET G [Default 3100]' with the value '3080', and 'OFFSET B [Default 3100]' with the value '3080'. Below these are three buttons: 'CALCULATE OFFSET', 'SEND OFFSET', and 'GET OFFSET'. At the bottom is a 'CLOSE' button.

This tab is now more clearly structured, but there are no other changes here.